

REMOVAL AND INSTALLATION OF M-SERIES ELECTRONICS MODULE


The M-Series transmitter is modular in design. The electronics module can be replaced in the field without onsite MTS applications engineering support.

To replace the M-Series electronics module, complete the following steps:

NOTE:

Ensure that all power is disconnected and that all lockout procedure(s) are followed prior to opening the M-Series instrumental housing.

1. Remove any dirt, debris, or liquid from the top of the instrument enclosure.
2. Remove the instrument housing cover.
3. Remove the existing transmitter electronics module, or puck, by grasping the perimeter of the puck and pulling it firmly upwards away from the base.
4. Install the new puck by aligning the connectors at the bottom of the puck with the appropriate connectors in the base of the instrument enclosure. Using even pressure on the face of the puck, press down firmly. Check that the puck is replaced correctly, by pressing down around on the perimeter of the puck face. The puck should feel secure and not “rock”.
5. Refer to the M-Series Operation and Installation Manual for calibration and setup instructions.
6. Replace the instrument housing cover.

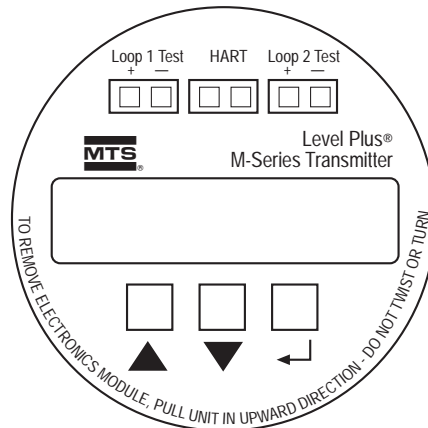

M-Series Electronic Module



SENSORS
GROUP

Pioneers,
Innovators,
Leaders in
Magnetostrictive
Sensing

UNITED STATES
MTS Systems Corporation
Sensors Division
3001 Sheldon Drive
Cary, NC 27513
Tel: 800.457.6620
919.678.2769
Fax: 919.677.2545
Email: level@mtssensors.com
Web: www.mtssensors.com

GERMANY
MTS Systems Corporation
Sensors Technologie
Auf dem Schuffel 9, D-58513 Lüdenscheid, Germany
Postfach 8130 D-58489 Lüdenscheid, Germany
Tel: + 49.2351.95870
Fax: + 49.2351.56491
Web: www.mtssensor.de

JAPAN
MTS Systems Corporation
Sensors Technologie Japan
Ushikubo Bldg.
737 Aihara-cho, Machida-shi
Tokyo 194-0211, Japan
Tel: + 81 (42) 775.3838
Fax: + 81 (42) 775.5512

